



HUMANE

Introduction:

Supreme Comfort Pads are handcrafted in America's heartland. They are constructed of vulcanized rubber and high grade industrial polyurethane foam. Supreme Comfort Pads are non-absorbent, anti-fungal, anti-bacterial, and non-skid. We manufacture 2 standard sizes which fit the common uses and can also custom trim the pads to meet your facility's needs.

Measuring for Installation:

Please follow these guidelines carefully as the sizing of the mats will directly affect their ability to hold up to the extremely demanding environments found in most barns.

1. Measure from the head of the stall to the edge of the gutter or concrete.
2. Reduce the overall length by 2", leaving a 1/2" gap at the top and a 1 1/2" space at the bottom of the mat towards the aisle or gutter.
3. Measure from center post to center post. Reduce the total width by 1/2", leaving a 1/2" space between mats and allowing for the mat to take in and push air when compressed.
4. If there is a post that requires onsite trimming please consult with your dealer or Humane so that the proper cavity size may be selected to insure proper fit and warranty coverage.

**Please note our sizing guidelines when selecting your Supreme Comfort Pad as an incorrect sizing choice may void your warranty.*

Receiving the Product:

Thoroughly inspect the delivered product for damage or defects. Any damage should be noted on the freight acceptance form and any defects should be reported to your dealer immediately.

Store the product in a clean, dry environment at room temperature for at least 24 hours prior to installation in order to acclimate the product.

**Rubber products including Supreme Comfort Pads can expand and contract up to 1/4" for every 30 degree variation from the installation temperature. Please discuss with your dealer the best times of year to install.*

Sub Floor Preparation:

Rough and uneven sub-floors can damage the underside of a Supreme Comfort Pad.

The warranty will be void if the proper preparation of the concrete sub-floor has not been followed.

1. Repair any holes in the concrete prior to installation.
2. The grade of the floor can be no more than 2%.
3. Ensure the concrete floor is clean and smooth.

Please contact Humane Manufacturing with any measuring or preparation questions.

www.Humanemfg.com

608-356-8336



HUMANE

Tools recommended for installation:

Cut Resistant Gloves
Safety Glasses
Measuring Tape
Silver Markers (to indicate cut lines)
3” Stainless Steel Anchors
¼” Stainless Steel Washers
Drill
Hammer
Sharp Utility Knife and Spare Blades
Sawzall
Carpenter Square & Straight Edge

Cutting a Supreme Comfort Pad:

-If trimming is required during installation please consult your dealer or Humane as a 3” glue area must be surrounding the entire cavity to maintain warranty coverage.

-Use a Sawzall and a 4”x4” board under the Supreme Comfort pad to cut in for a post.

**Dawn Dish Soap or Silicon Spray are the recommended lubricants.*

***A Sawzall blade with 22-25 teeth per inch is required, they are also normally utilized for steel cutting.*

Installation of Supreme Comfort Pad:

-Only install the Supreme Comfort Pads after the sub floor has been properly prepped.

-Install the Supreme Comfort Pad ½” from the head of the stall and 1 ½” inch from the edge at the tail of the stall.

-Insure that there is a ½” gap on either side of the Supreme Comfort Pad to allow the air vents to work properly during compression.

-Drill a hole 4” from the side of the mat and 2” from the head of the mat on both sides.

Installation Cont.

-Only 2 anchors are required to hold the pad secure once installed. Use a drill and a hammer to fasten the 2 - 3” stainless steel anchors and washers into the concrete.

-Incorrect installation of the Supreme Comfort Pad may damage the mat and void the warranty so please contact your dealer or Humane directly with any questions.

Cleaning and Maintenance:

Clean the Supreme Comfort Pads using a general purpose dairy cleaner with **lower or neutral PH**.

Do not use cleaners that contain bleach, chlorine, or petroleum. If any of these substances are spilled on the Supreme Comfort Pad, remove them immediately to avoid voiding the warranty.

**If you are unsure about the use of your cleaner on a Supreme Comfort Pad, please contact Humane directly for guidance.*

For cleaning and disinfecting use alcohols or a solution of 1% or less concentrate of soap or detergent.

For softeners or lubricants use a glycerin or silicone based product. Diluted Dawn soap makes a great cleaner. A solution of 2 parts witch hazel and 1 part glycerin makes a great astringent, anti-irritant, antiseptic that will also moisturize.

**To maintain warranty coverage the gaps between mats and the mats themselves must be hosed down once a month to keep the air vents clear of debris.*

Disclaimers:

Udder balm and bag balm should not come into contact with the mats as they will be hard to remove and will cause swelling. Any product with iodine, petroleum, animal oil, mineral oil or vegetable oil will have the same results.

To maintain warranty coverage, only teat dips with less than ½% of Iodine may be used with Humane mats. If you are not sure about yours please contact Humane directly for approval.